


1. All components shown. The cable boot is required and compatible with most connectors.




2. Connector inserted into the device.



3. Lock inserted to secure connector to device.

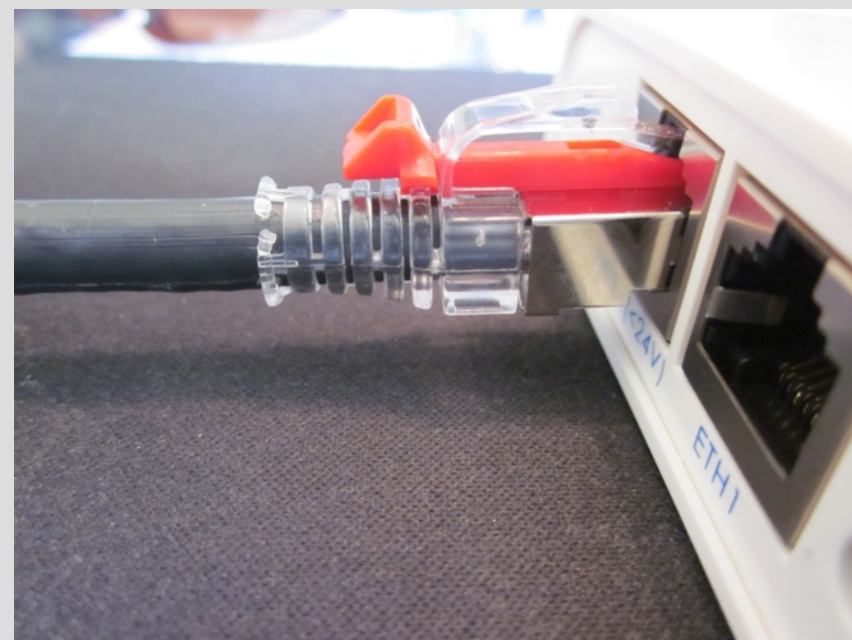

4. Close-up of connector with lock inserted.

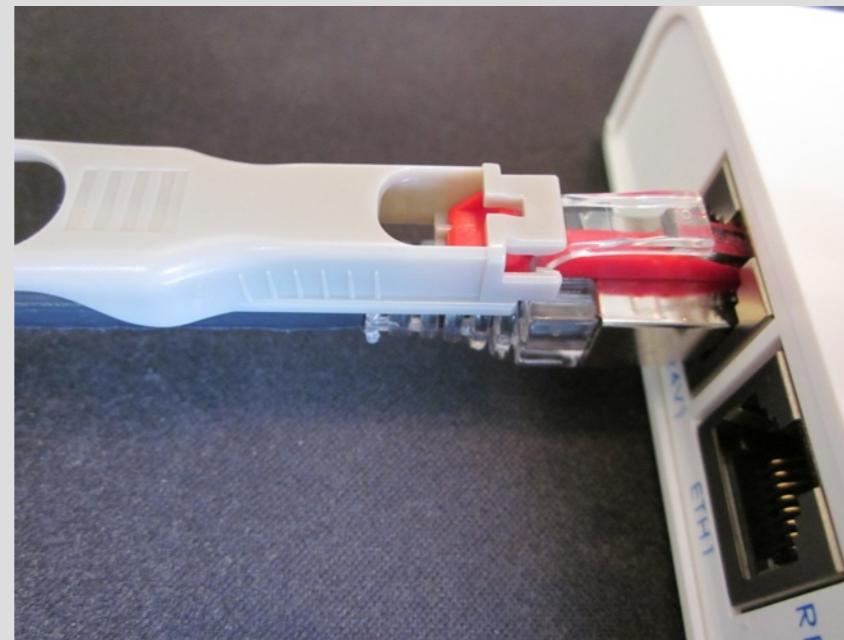

5. Key attached to remove the lock from the connector.



6. Lock removed from connector. The cable can now be removed from the device.